




Spare parts are delivered only on the basis of an order sent to the manufacturer. Ordering spare parts from the manufacturer ensures that the installed parts are identical to those used in the original machine in terms of their structure and technology. Only original spare parts guarantee continuous functionality of the machine.

Please indicate the type of the machine and its serial number when ordering spare parts from the manufacturer. The above data can be found in this manual and on the nameplate attached to the machine.

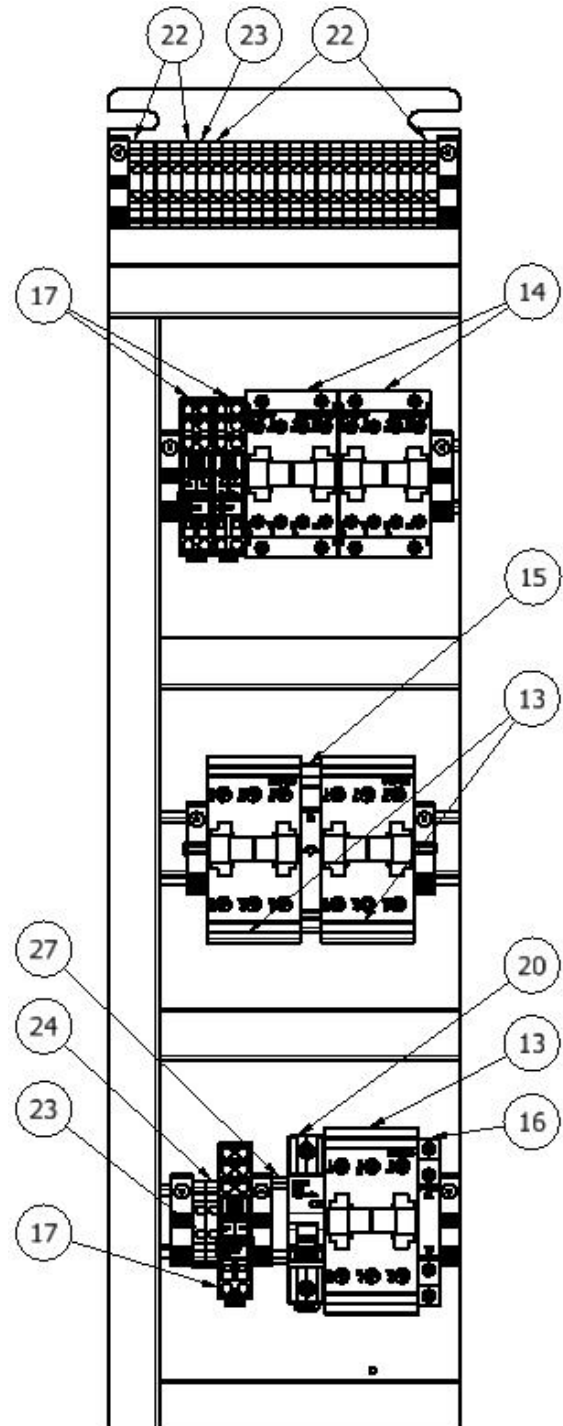

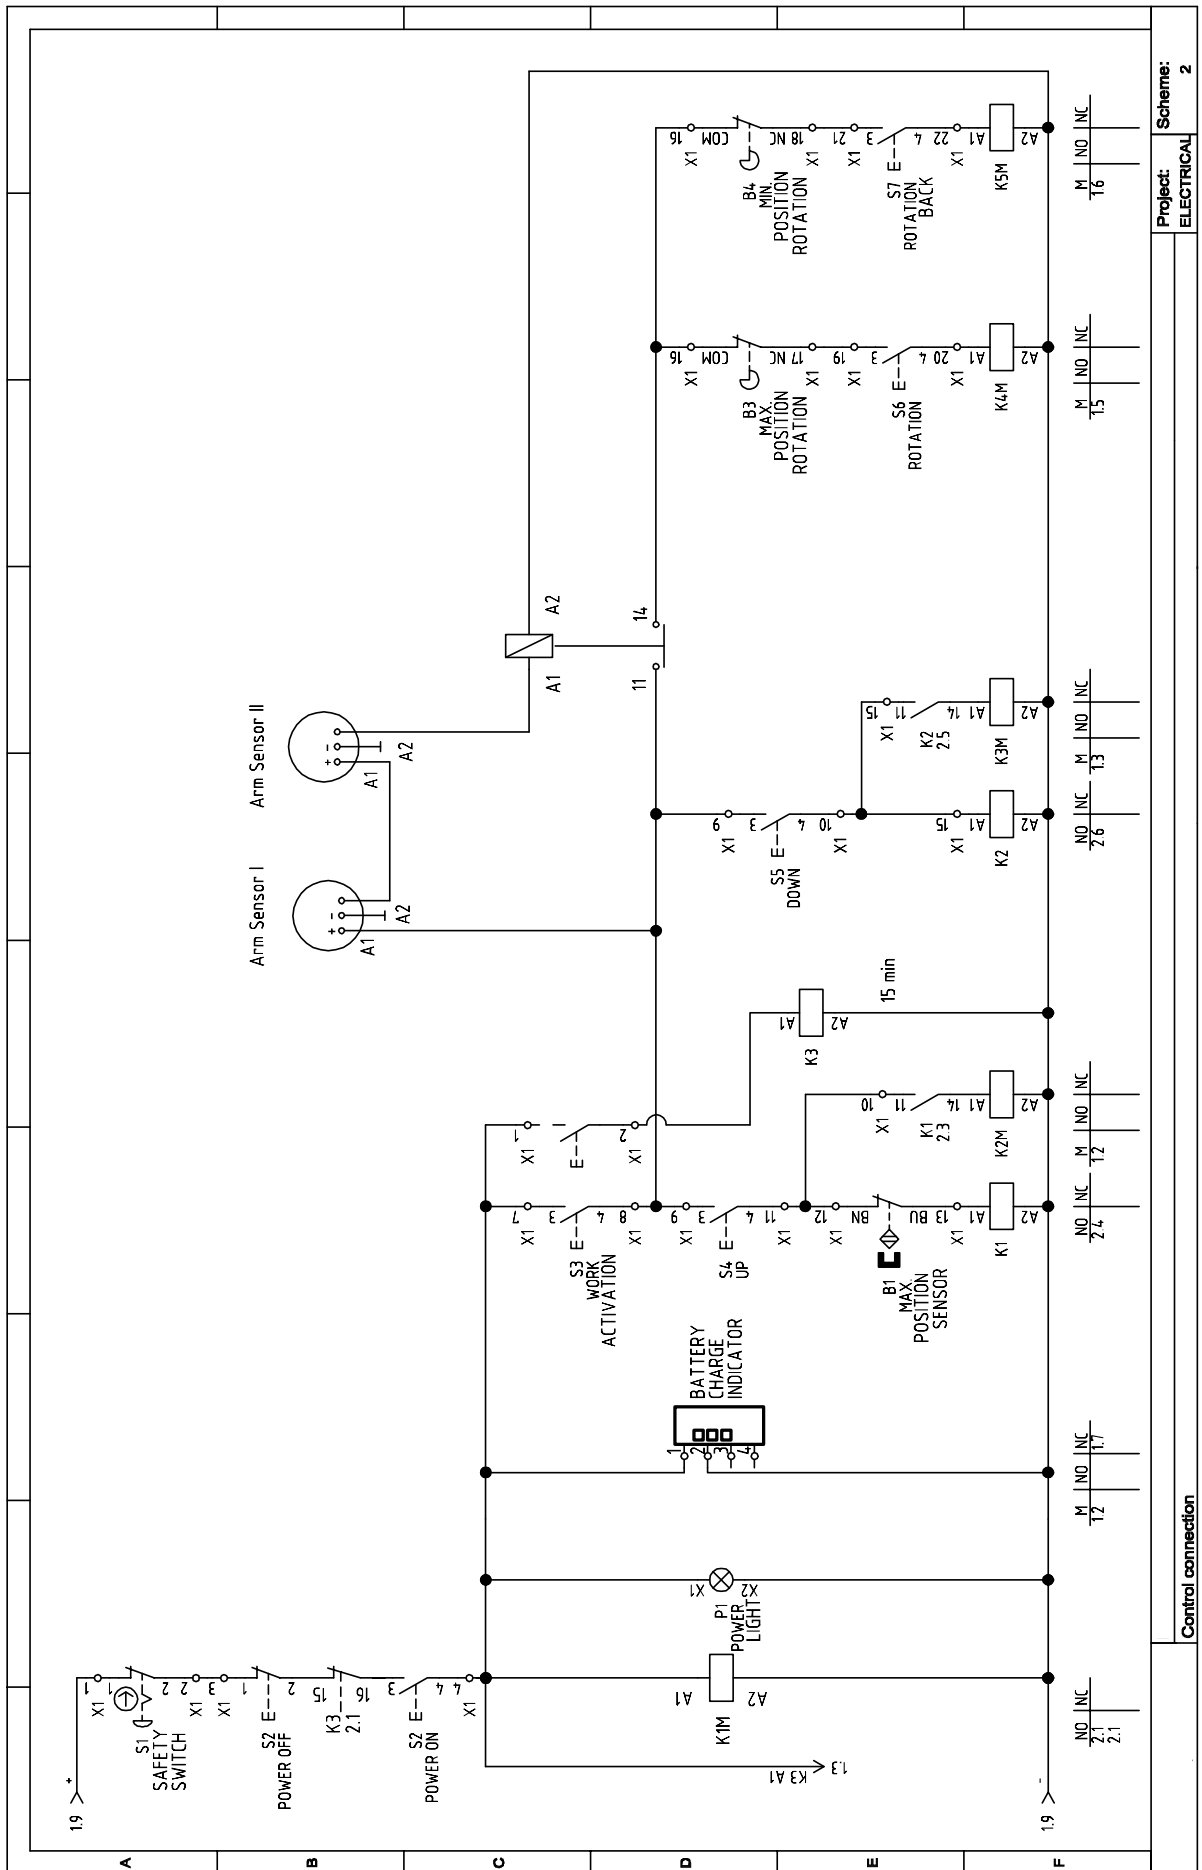

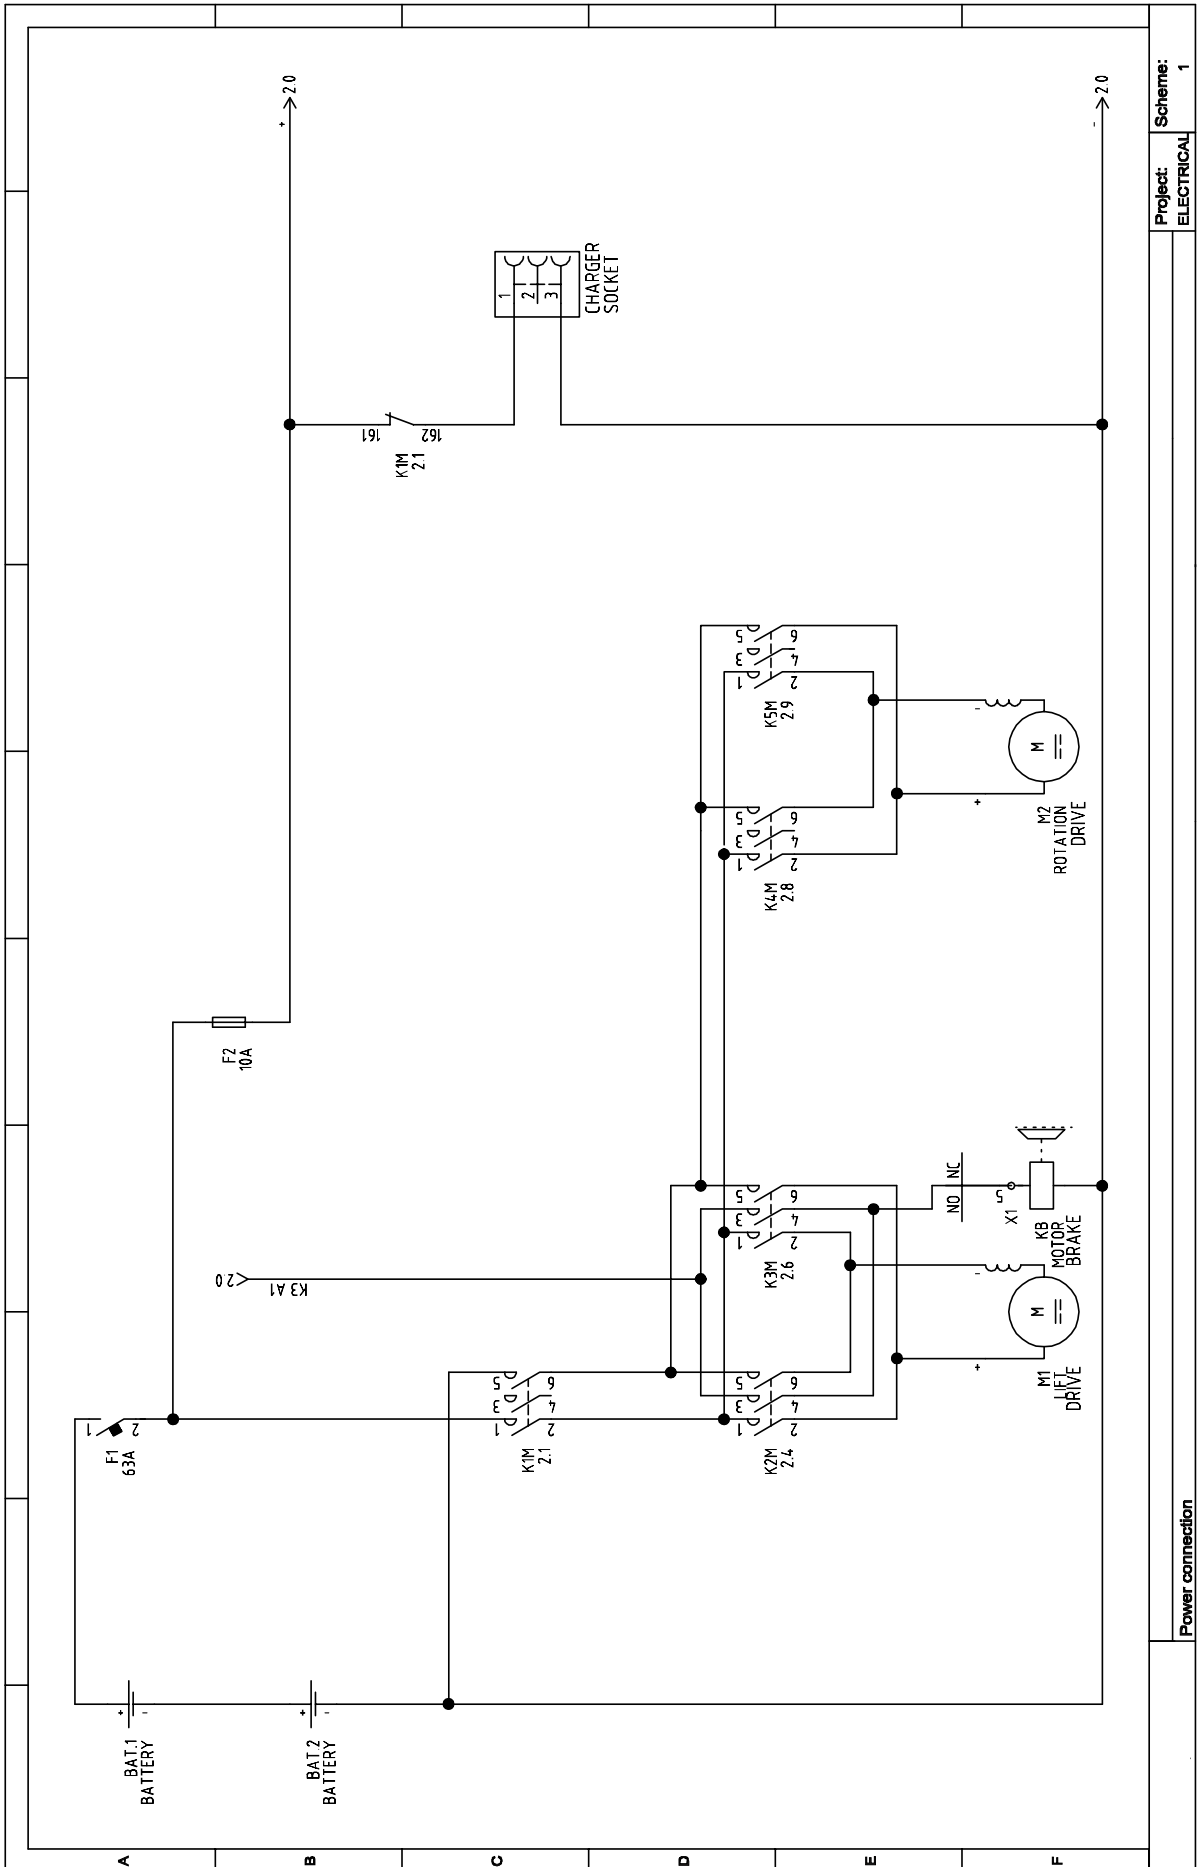

Project: ELECTRICAL
Scheme: 1

Power connection